



QUICK START GUIDE

ACTIONS

Learn How To:

1. Create an Action
2. Manage Actions
3. Turn an Alert into an Action

MY ACTIONS

TO DO 3

EQUIPMENT HAS MISSING INFO: ENGINE OF 366215

START

CUSTOMER: ACME Demo

WORKSITE: Houston , TX

UNIT ID: 366215

COMP. DESC.: ENGINE

ASSIGNED BY : Lori_BPNNew Beerwart

Add info please

Comment

EQUIPMENT HAS MISSING INFO: ENGINE OF 632407

START

CUSTOMER: Acme Demo

WORKSITE: Worksite 2

UNIT ID: 632407

COMP. DESC.: ENGINE

ASSIGNED BY : Lori_BPNNew Beerwart

Add in info please

Comment

IN PROGRESS 1

EQUIPMENT MAINTENANCE EVENT: COOLING SYSTEM OF MX3182

RESOLVE

CUSTOMER: ACME Demo

WORKSITE: Houston , TX

UNIT ID: MX3182

COMP. DESC.: COOLING SYSTEM

ASSIGNED BY : Acme Demo

RECORD MAINTENANCE

Comment

DONE 1

EQUIPMENT MAINTENANCE EVENT: TRANS-AUTO OF MX3182

RESOLUTION: CHANGED OIL

Select the **ACTIONS** tab to open the **NEW ACTIONS** module. You will land on the **My Actions** tab. Actions assigned to you are displayed in the TO DO, IN PROGRESS or DONE column depending on their status.

MY ACTIONS

My Actions

Manage Actions

Alerts

TO DO 3

EQUIPMENT HAS MISSING INFO: ENGINE OF 366215

CUSTOMER: ACME Demo

WORKSITE: Houston , TX

UNIT ID: 366215

COMP. DESC.: ENGINE

ASSIGNED BY : Lori_BPNew Beerwart

Add info please

[Comment](#)

START

START

IN PROGRESS 1

EQUIPMENT MAINTENANCE EVENT: COOLING SYSTEM OF MX3182

CUSTOMER: ACME Demo

WORKSITE: Houston , TX

UNIT ID: MX3182

COMP. DESC.: COOLING SYSTEM

ASSIGNED BY : Acme Demo

RECORD MAINTENANCE

[Comment](#)

RESOLVE

DONE 1

EQUIPMENT MAINTENANCE EVENT: TRANS-AUTO OF MX3182

RESOLUTION: CHANGED OIL

Click on the **START** button to move your action to IN PROGRESS. Click on the **RESOLVE** button to move your action to DONE.

MANAGE ACTIONS






Created On greater than 03/05/2023 x

+ Add Filter



+ NEW ACTION

ALL ACTIONS

Action	Status	Resolution	Assigned To	
 COMPONENT OVERDUE FOR SAMPLING: HYDRAULIC OF 632407	New	Unresolved	Demo Abc	<input type="button" value="CANCEL"/> <input type="button" value="REASSIGN"/> ▾
 EQUIPMENT HAS MISSING INFO: ENGINE OF 366215	New	Unresolved	Acme Demo	<input type="button" value="CANCEL"/> <input type="button" value="REASSIGN"/> ▾
 EQUIPMENT HAS MISSING INFO: ENGINE OF 632407	New	Unresolved	Acme Demo	<input type="button" value="CANCEL"/> <input type="button" value="REASSIGN"/> ▾
 EQUIPMENT MAINTENANCE EVENT: COOLING SYSTEM OF MX3182	In Progress	Unresolved	Acme Demo	<input type="button" value="REASSIGN"/> ▾
 EQUIPMENT MAINTENANCE EVENT: TRANS- AUTO OF MX3182	Complete	Changed Oil	Acme Demo	<input type="button" value="REOPEN"/> ▾

Click on the **Manage Actions** tab to view all actions. By default, you will see those actions created in the last month. 'New' actions can be cancelled or reassigned. 'In Progress' actions can be reassigned. 'Completed' actions can be reopened. Simply click the associated button.

MANAGE ACTIONS






My Actions Manage Actions Alerts

Created On greater than 03/05/2023 x + Add Filter



+ NEW ACTION

ALL ACTIONS

Action	Status	Resolution	Assigned To	
 COMPONENT OVERDUE FOR SAMPLING: HYDRAULIC OF 632407	New	Unresolved	Demo Abc	CANCEL REASSIGN
 EQUIPMENT HAS MISSING INFO: ENGINE OF 366215	New	Unresolved	Acme Demo	CANCEL REASSIGN
 EQUIPMENT HAS MISSING INFO: ENGINE OF 632407	New	Unresolved	Acme Demo	CANCEL REASSIGN
 EQUIPMENT MAINTENANCE EVENT: COOLING SYSTEM OF MX3182	In Progress	Unresolved	Acme Demo	REASSIGN
 EQUIPMENT MAINTENANCE EVENT: TRANS-AUTO OF MX3182	Complete	Changed Oil	Acme Demo	REOPEN

Click on the **+NEW ACTION** button to create a new action.



MANAGE ACTIONS

NEW ACTION

CANCEL

SAVE NEW ACTION

Action Type*



Equipment*



Action Title*

Action Description

Estimated Savings

Worksite

Recipient Information

Assign To*

Select an assignee for this action



Other Recipients


Type recipient email or search contacts



Recipients List is empty

Get started by selecting your Action Type and use the search to find your equipment. Add comments or instructions in the description.

MANAGE ACTIONS

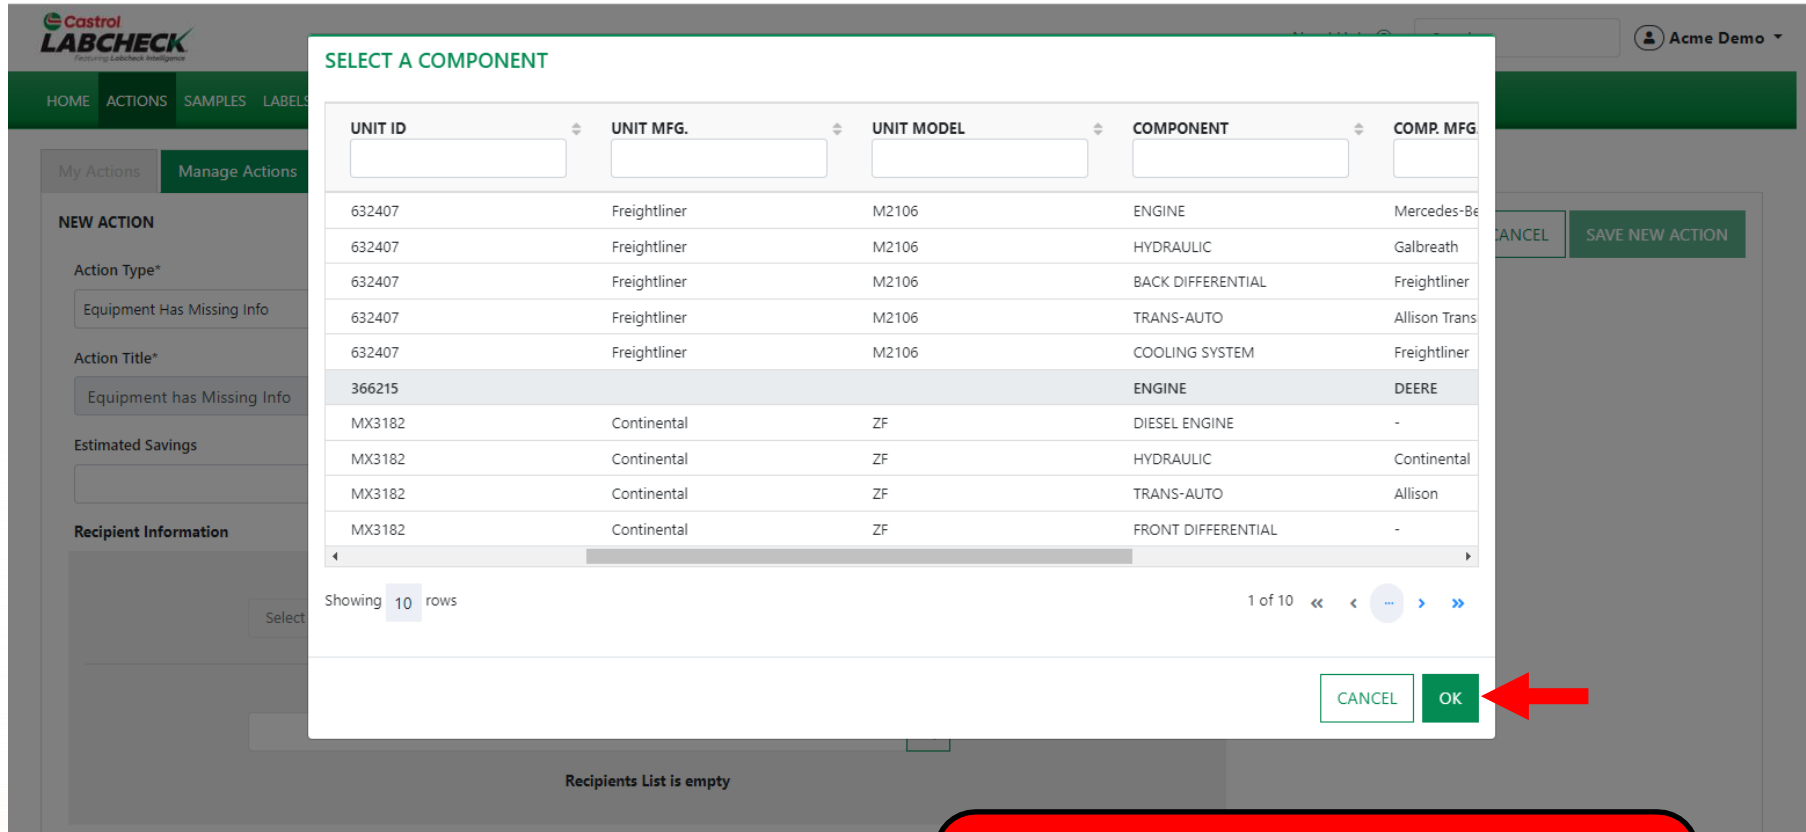

SELECT A COMPONENT

UNIT ID	UNIT MFG.	UNIT MODEL	COMPONENT	COMP. MFG.
632407	Freightliner	M2106	ENGINE	Mercedes-Be
632407	Freightliner	M2106	HYDRAULIC	Galbreath
632407	Freightliner	M2106	BACK DIFFERENTIAL	Freightliner
632407	Freightliner	M2106	TRANS-AUTO	Allison Trans
632407	Freightliner	M2106	COOLING SYSTEM	Freightliner
366215			ENGINE	DEERE
MX3182	Continental	ZF	DIESEL ENGINE	-
MX3182	Continental	ZF	HYDRAULIC	Continental
MX3182	Continental	ZF	TRANS-AUTO	Allison
MX3182	Continental	ZF	FRONT DIFFERENTIAL	-

Showing 10 rows 1 of 10

CANCEL OK

Use the filters to locate the desired piece of equipment. Select it and click the **OK** button.

MANAGE ACTIONS

My Actions **Manage Actions** Alerts

NEW ACTION

CANCEL

SAVE NEW ACTION

Action Type*

Equipment Has Missing Info

Equipment*



Action Title*

Equipment has Missing Info

Action Description

Please add missing information

Estimated Savings

Worksite

Recipient Information

Assign To*

Select an assignee for this action



Other Recipients



Recipients List is empty

To assign the action to a user,
click the search to display a list of
users.

MANAGE ACTIONS

SELECT USER

FIRST NAME	LAST NAME	USERNAME	EMAIL
Acme	Demo	Acme_Demo	lori.beerwart+acme@bureauveritas.com
Demo	Abc	demoabc	demoabc@abc.com
John	Smith	JSmith@email.com	JSmith@email.com
Melissa	Wood	MWood@email.com	MWood@email.com

Showing 10 rows 1 of 1

CANCEL OK

NEW ACTION

Action Type*
Equipment Has Missing Info

Action Title*
Equipment has Missing Info: E

Estimated Savings

Recipient Information

Assign To*
Select an assignee for this action

Other Recipients

Recipients List is empty

Select a user and click the **OK** button.

MANAGE ACTIONS

The screenshot shows the 'Manage Actions' page in the Castrol Labcheck system. A modal window titled 'SEARCH CONTACTS' is open, displaying a table of contacts. The table has columns for EMAIL, FIRST NAME, LAST NAME, and COMPANY. The contact 'jessicaabc@abc.com' is selected with a checked checkbox. Below the table, it says 'Showing 10 rows' and '1 of 1'. There are 'CANCEL' and 'OK' buttons at the bottom right of the modal. A red arrow points to the 'Manage Actions' tab, and another red arrow points to the 'OK' button.

	EMAIL	FIRST NAME	LAST NAME	COMPANY
<input type="checkbox"/>	janedoe1@bureauveritas.com	Jane	Doe	BP
<input checked="" type="checkbox"/>	jessicaabc@abc.com	Jessica	Abc	ABC Company
<input type="checkbox"/>	johndoe1@bureauveritas.com	John	Deere	BP

To add other recipients, click the search to display your contacts from your Address Book. Select the contact(s) using the checkbox(es) and click the **OK** button.

MANAGE ACTIONS

My Actions **Manage Actions** Alerts

NEW ACTION

Action Type*

Equipment Has Missing Info

Equipment*

366215

Action Title*

Equipment has Missing Info: ENGINE of 366215

Action Description

Please add missing information

Estimated Savings

Worksite

Houston , TX

Recipient Information

Assign To*

Demo Abc

Other Recipients

Recipient Email

jessicaabc@abc.com

CANCEL

SAVE NEW ACTION



Finish by selecting the **SAVE NEW ACTION** button.

MANAGE ACTIONS






My Actions Manage Actions Alerts

Created On greater than 03/05/2023 x + Add Filter



+ NEW ACTION

ALL ACTIONS

Action	Status	Resolution	Assigned To	
 EQUIPMENT HAS MISSING INFO: ENGINE OF 366215	New	Unresolved	Demo Abc	CANCEL REASSIGN ▾
 COMPONENT OVERDUE FOR SAMPLING: HYDRAULIC OF 632407	New	Unresolved	Demo Abc	CANCEL REASSIGN ▾
 EQUIPMENT HAS MISSING INFO: ENGINE OF 366215	New	Unresolved	Acme Demo	CANCEL REASSIGN ▾
 EQUIPMENT HAS MISSING INFO: ENGINE OF 632407	New	Unresolved	Acme Demo	CANCEL REASSIGN ▾
 EQUIPMENT MAINTENANCE EVENT: GEARBOX OF MX3182	New	Unresolved	Lori_BPNNew Beerwart	CANCEL REASSIGN ▾

[Show More](#)

The new action will be displayed at the top of the list.

MANAGE ACTIONS






My Actions Manage Actions Alerts

Created On greater than 03/05/2023 x + Add Filter



+ NEW ACTION

ALL ACTIONS

Action	Status	Resolution	Assigned To	
 EQUIPMENT HAS MISSING INFO: ENGINE OF 366215	New	Unresolved	Demo Abc	CANCEL REASSIGN ^
Created By Acme Demo	Customer ACME Demo	Worksite Houston , TX	Unit Id 366215	Comp. Desc. ENGINE
Please add missing information				
Comment				
 COMPONENT OVERDUE FOR SAMPLING: HYDRAULIC OF 632407	New	Unresolved	Demo Abc	CANCEL REASSIGN v
 EQUIPMENT HAS MISSING INFO: ENGINE OF 366215	New	Unresolved	Acme Demo	CANCEL REASSIGN v
 EQUIPMENT HAS MISSING INFO: ENGINE OF 632407	New	Unresolved	Acme Demo	CANCEL REASSIGN v
 EQUIPMENT MAINTENANCE EVENT: GEARBOX OF MX3182	New	Unresolved	Lori_BPNew Beerwart	

Show More







Click the expand arrow to see the details.



ALERTS

Created On greater than 05/01/2023 x + Add Filter

CREATE ACTION(S) DISMISS ALERT(S)

<input type="checkbox"/>	ALERT TYPE	DETAILS	STATUS	CREATED ON	CUSTOMER	WORKSITE	UNIT ID	COMP. DESC.	
<input type="checkbox"/>		Component Overdue for Sampling: ENGINE of 672547	New	05/02/2023	Acme Demo	Houston, TX	672547	ENGINE	
<input type="checkbox"/>		Component Overdue for Sampling: ENGINE of 631573	New	31/01/2023	Acme Demo	Houston, TX	631573	ENGINE	
<input type="checkbox"/>		Component Overdue for Sampling: ENGINE of 409346	New	31/01/2023	Acme Demo	Houston, TX	409346	ENGINE	

Click on the **Alerts** tab to display a list of Alerts.









ALERTS

My Actions Manage Actions Alerts

Created On greater than 05/01/2023 x + Add Filter

CREATE ACTION(S) DISMISS ALERT(S)

<input type="checkbox"/>	ALERT TYPE	DETAILS	STATUS	CREATED ON	CUSTOMER	WORKSITE	UNIT ID	COMP. DESC.	
<input checked="" type="checkbox"/>		Component Overdue for Sampling: ENGINE of 672547	New	05/02/2023	Acme Demo	Houston, TX	672547	ENGINE	
<input type="checkbox"/>		Component Overdue for Sampling: ENGINE of 631573	New	31/01/2023	Acme Demo	Houston, TX	631573	ENGINE	
<input type="checkbox"/>		Component Overdue for Sampling: ENGINE of 409346	New	31/01/2023	Acme Demo	Houston, TX	409346	ENGINE	

Use the checkbox to select an Alert. Once selected, an action can be created by clicking on the **CREATE ACTION** button or the alert can be dismissed by clicking the **DISMISS ALERT(S)** button.

CREATE ACTIONS FROM SAMPLE

← BACK

TREND GRAPH

SEND EMAIL

DOWNLOAD PDF

Sample Condition Particle Count

Status



Graphs Attachments Comments Actions

ACCOUNT INFORMATION

Lab Customer ID#: 319182
Company Name: [ACME Demo](#)
Worksite: Houston, TX
Address: 123,
Edmonton, Alberta, T6B 3M9

SAMPLE INFORMATION

Lab No.: 202109220663
Sample Tracking #: E202109170544
Sampled Date: 09/14/2021
Received Date: 09/22/2021
Completed Date: 09/23/2021

OTHER SAMPLE INFORMATION

PO No.:
Work Order No.:
Reference No.: 5543015
Filter Age:
Make Up Oil Amount:

UNIT INFORMATION

Unit ID: [632407](#)
Unit Manufacturer: Freightliner
Unit Model: M2106
Unit Serial:
Unit Worksite: Houston, TX

COMPONENT INFORMATION

Component Description: [HYDRAULIC](#)
Component Manufacturer: Galbreath
Component Model: CH8000
Component Serial:
Component Type: HYDRAULIC

FLUID INFORMATION

Fluid Manufacturer: CASTROL
Fluid Brand/Product: DUAL RANGE HV
Fluid Grade: ISO 46

RECOMMENDATIONS

Maintenance for Lab No.:
202109220663
Evaluated By: SKULLAS

Particle Count exceeds guidelines. --RECOMMENDATIONS -- Change oil filter. Sample results indicate presence of contamination and/or wear. For a more indepth review, refer to compartment history, trend graph or other Labcheck tools. A resample of the compartment will help confirm results. When C or D codes are present, the following is recommended, if not done at time of sampling. Change oil, and filters (if applicable), to remove contamination. If applicable, perform off-line filtration if available. Closely monitor unit and resample at one-half the normal service interval.

Results

History

Actions

Graphs

Attachments


Comments

ALL ACTIONS 0

+ NEW ACTION

To create an action from the Sample Details page, click on the Actions tab and click the + **NEW ACTION** button.

CREATE ACTIONS FROM SAMPLE

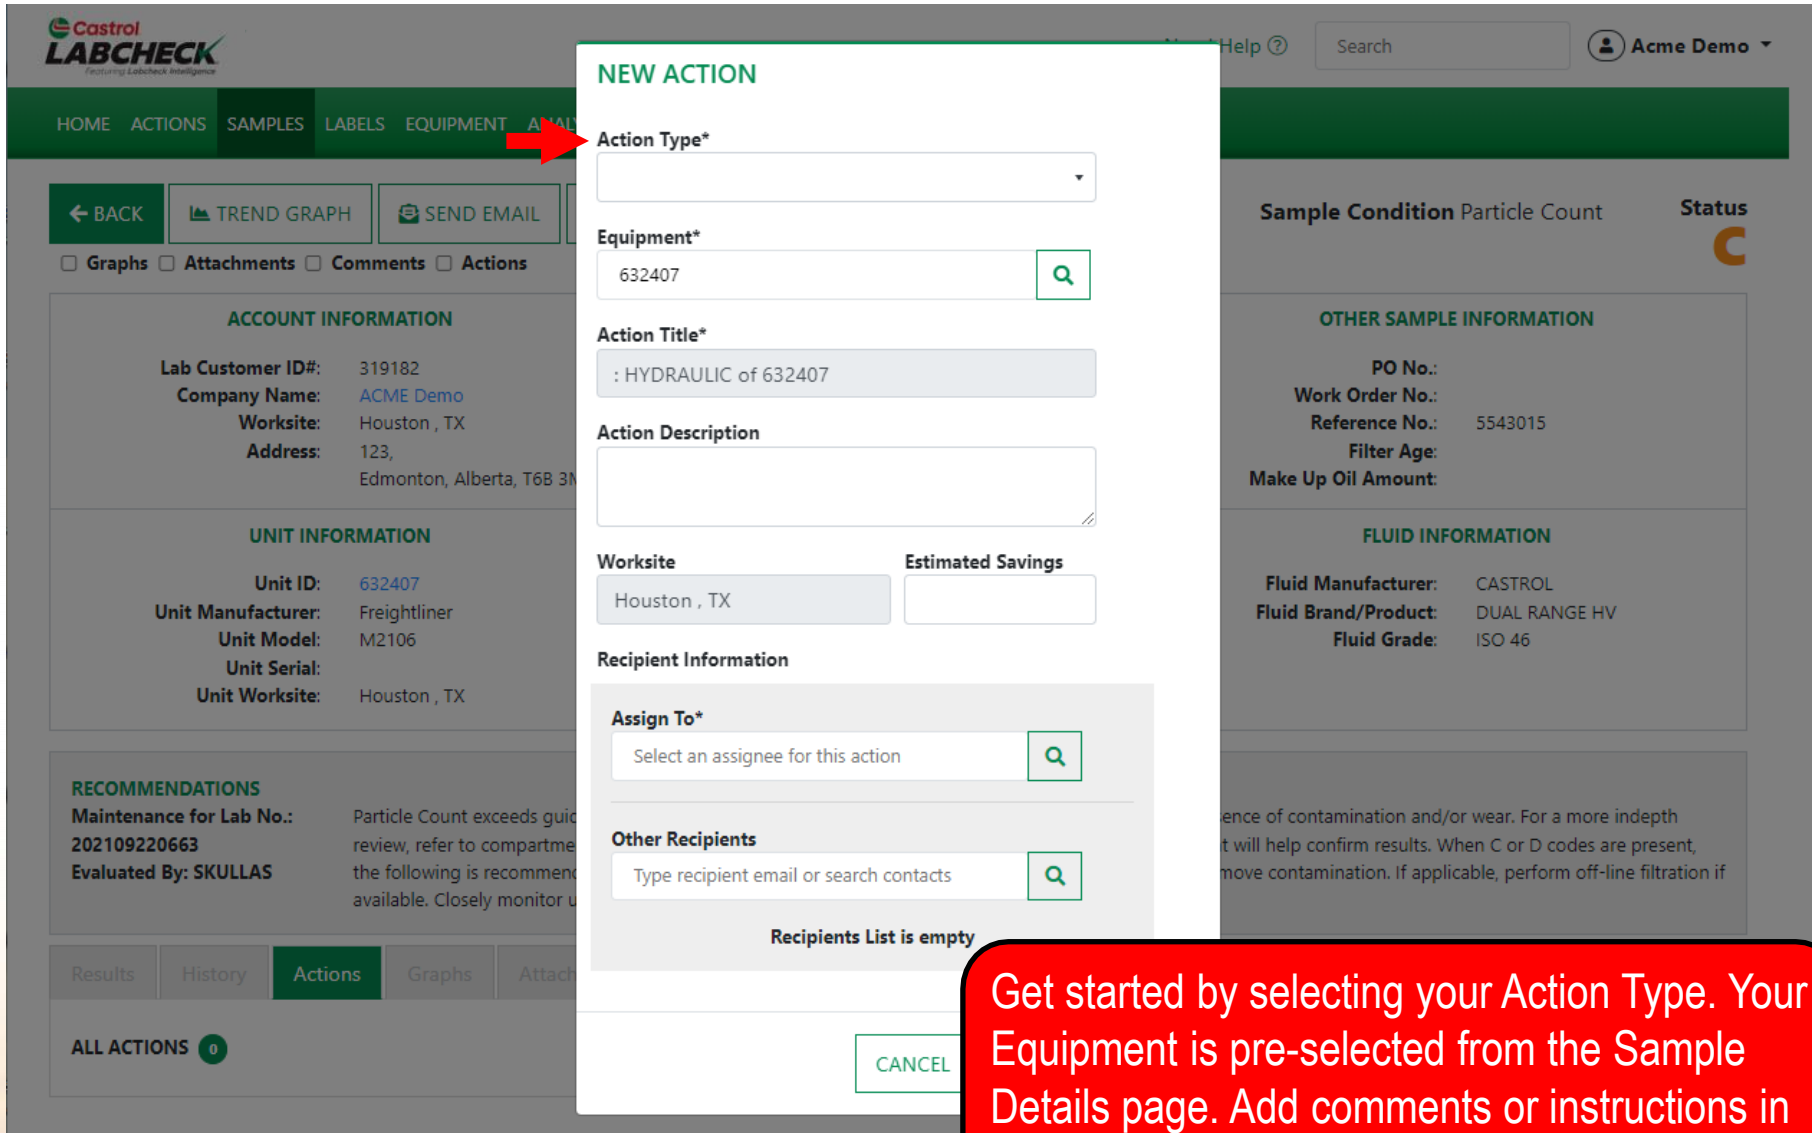

NEW ACTION

Action Type*

Equipment* 632407

Action Title* : HYDRAULIC of 632407

Action Description

Worksite Houston , TX Estimated Savings

Recipient Information

Assign To* Select an assignee for this action

Other Recipients Type recipient email or search contacts

Recipients List is empty

ACCOUNT INFORMATION

Lab Customer ID#: 319182
Company Name: ACME Demo
Worksite: Houston , TX
Address: 123, Edmonton, Alberta, T6B 3M

UNIT INFORMATION

Unit ID: 632407
Unit Manufacturer: Freightliner
Unit Model: M2106
Unit Serial:
Unit Worksite: Houston , TX

RECOMMENDATIONS

Maintenance for Lab No.: 202109220663
Evaluated By: SKULLAS

Particle Count exceeds guid review, refer to compartme the following is recommend available. Closely monitor u

OTHER SAMPLE INFORMATION

PO No.:
Work Order No.:
Reference No.: 5543015
Filter Age:
Make Up Oil Amount:

FLUID INFORMATION

Fluid Manufacturer: CASTROL
Fluid Brand/Product: DUAL RANGE HV
Fluid Grade: ISO 46

ence of contamination and/or wear. For a more indepth it will help confirm results. When C or D codes are present, move contamination. If applicable, perform off-line filtration if

HOME ACTIONS SAMPLES LABELS EQUIPMENT ANALYSIS

← BACK TREND GRAPH SEND EMAIL

Graphs Attachments Comments Actions

Search Acme Demo

ALL ACTIONS 0

Get started by selecting your Action Type. Your Equipment is pre-selected from the Sample Details page. Add comments or instructions in the description.

CREATE ACTIONS FROM SAMPLE

The screenshot shows the 'NEW ACTION' form in the Castrol Labcheck system. The form is overlaid on a background of a sample's data page. The form fields are as follows:

- Action Type*:** Component Overdue for Sampling
- Equipment*:** 632407
- Action Title*:** : HYDRAULIC of 632407
- Action Description:** Please sample as soon as possible
- Worksite:** Houston , TX
- Estimated Savings:** (empty field)
- Recipient Information:**
 - Assign To*:** Select an assignee for this action (with a search icon and a red arrow pointing to it)
 - Other Recipients:** Type recipient email or search contacts (with a search icon)
 - Recipients List is empty

A red callout box at the bottom right contains the text: "To assign the action to a user, click the search to display a list of users."

CREATE ACTIONS FROM SAMPLE

SELECT USER

FIRST NAME	LAST NAME	USERNAME	EMAIL
Acme	Demo	Acme_Demo	lori.beerwart+acme@bureauveritas.com
Demo	Abc	demoabc	demoabc@abc.com
John	Smith	JSmith@email.com	JSmith@email.com
Melissa	Wood	MWood@email.com	MWood@email.com

Showing 10 rows 1 of 1

CANCEL **OK**

Recipient Information

Assign To*
Select an assignee for this action

Other Recipients
Type recipient email or search contacts

Recipients List is empty

CANCEL **SAVE NEW ACTION**

RECOMMENDATIONS
Maintenance for Lab No.: 202109220663
Evaluated By: SKULLAS

Unit Model: M2106
Unit Serial:
Unit Worksite: Houston, TX

Fluid Grade: ISO 46

ALL ACTIONS 0

Select a user and click the OK button.

CREATE ACTIONS FROM SAMPLE

SEARCH CONTACTS

EMAIL	FIRST NAME	LAST NAME	COMPANY
<input type="checkbox"/> janedoe1@bureauveritas.com	Jane	Doe	Bureau Veritas
<input checked="" type="checkbox"/> jessicaabc@abc.com	Jessica	Abc	ABC Company
<input type="checkbox"/> johndoe1@bureauveritas.com	John	Deere	Bureau Veritas

Showing 10 rows 1 of 1

Unit ID: 632407
Unit Manufacturer: Freightliner
Unit Model: M2106
Unit Serial:
Unit Worksite: Houston, TX

Worksite: Houston, TX
Estimated Savings:
Fluid Manufacturer: CASTROL

Recipient Information
Assign To*: Demo Abc
Other Recipients: Type recipient email or search

RECOMMENDATIONS
Maintenance for Lab No.: 202109220663
Evaluated By: SKULLAS
Particle Count exceeds guidelines. Refer to compartment history for more information. The following is recommended based on the data available. Closely monitor the unit.


Recipients List is empty

All

ALL ACTIONS 0

To add other recipients, click the search to display your contacts from your Address Book. Select the contact(s) using the checkbox(es) and click the **OK** button.

CREATE ACTIONS FROM SAMPLE

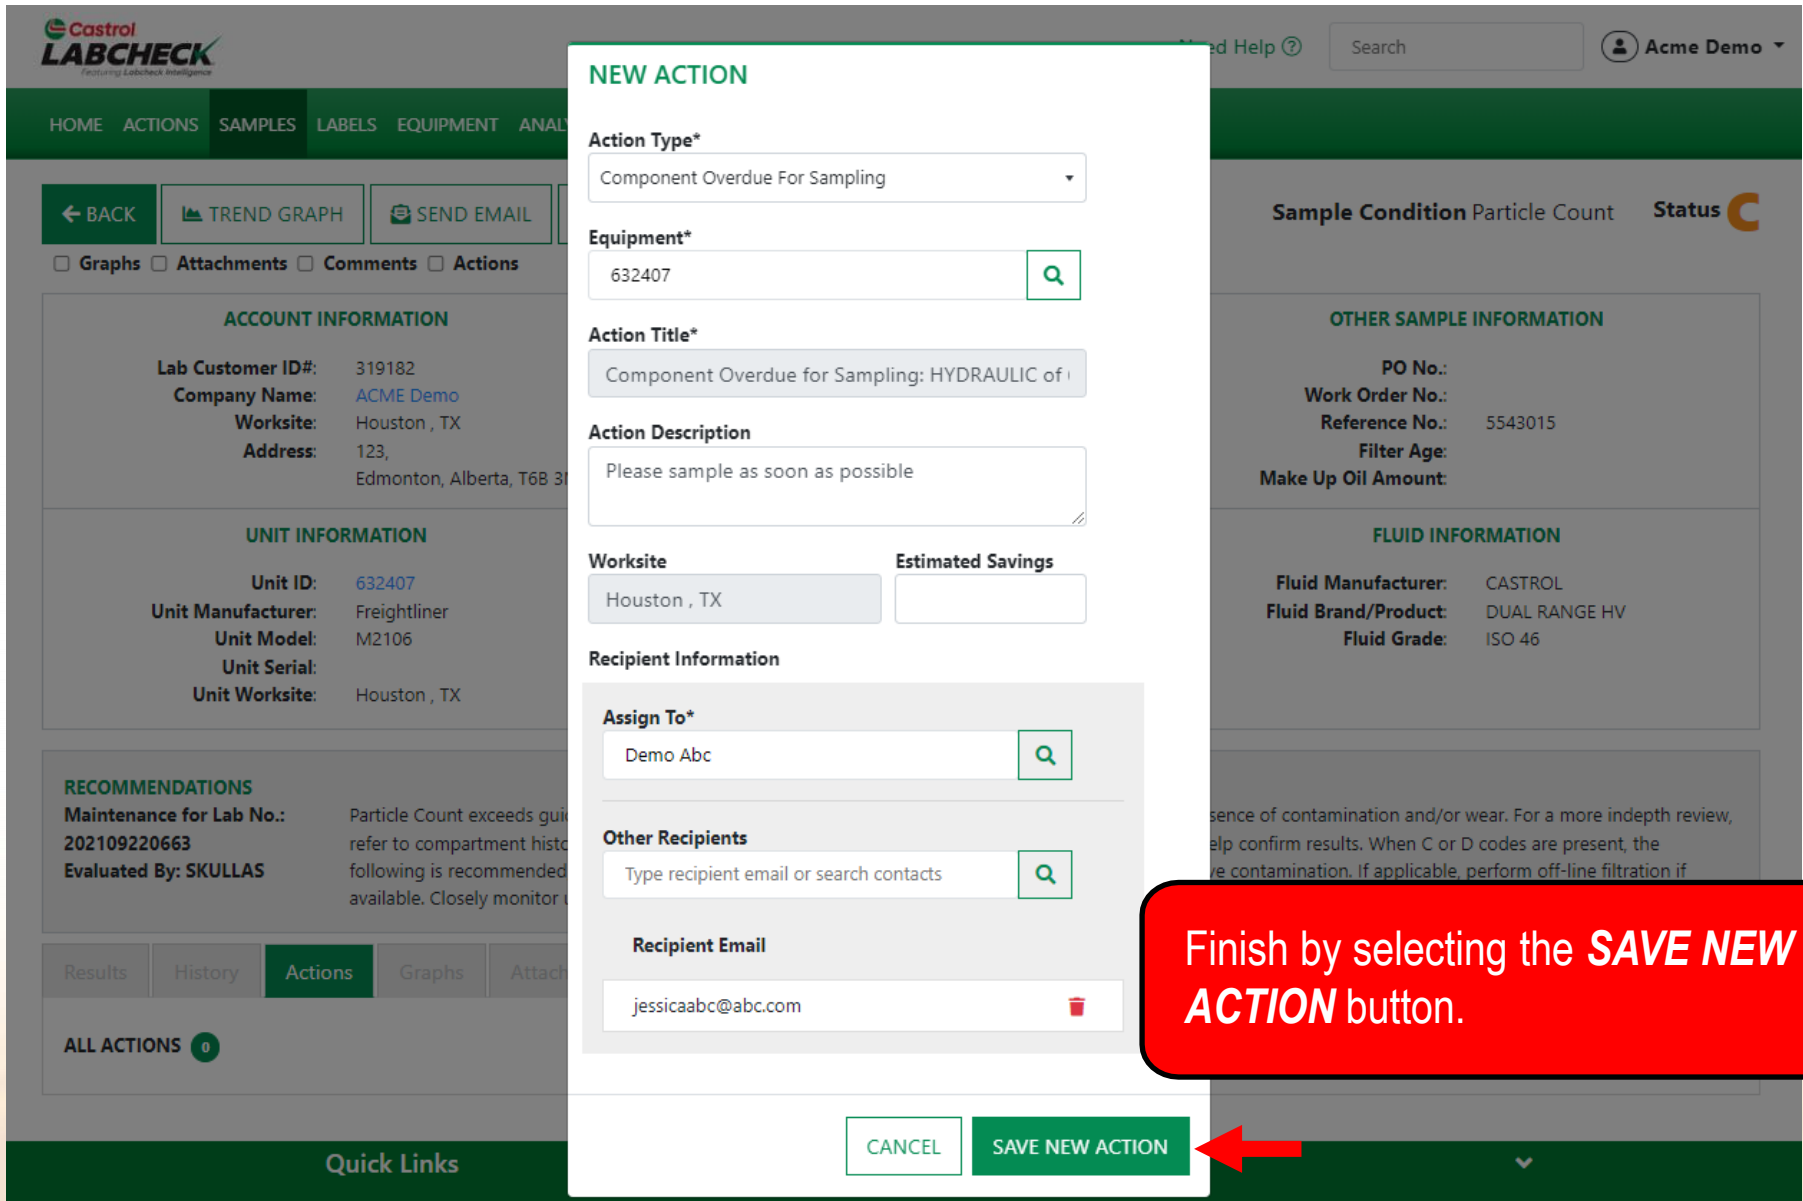

NEW ACTION

Action Type*
Component Overdue For Sampling

Equipment*
632407

Action Title*
Component Overdue for Sampling: HYDRAULIC of

Action Description
Please sample as soon as possible

Worksite
Houston , TX

Estimated Savings

Recipient Information

Assign To*
Demo Abc

Other Recipients
Type recipient email or search contacts

Recipient Email
jessicaabc@abc.com

Finish by selecting the *SAVE NEW ACTION* button.

BACKGROUND PAGE INFORMATION:

HOME ACTIONS SAMPLES LABELS EQUIPMENT ANALYSIS

← BACK TREND GRAPH SEND EMAIL

Graphs Attachments Comments Actions

ACCOUNT INFORMATION

Lab Customer ID#: 319182
Company Name: ACME Demo
Worksite: Houston , TX
Address: 123, Edmonton, Alberta, T6B 3R1

UNIT INFORMATION

Unit ID: 632407
Unit Manufacturer: Freightliner
Unit Model: M2106
Unit Serial:
Unit Worksite: Houston , TX

RECOMMENDATIONS

Maintenance for Lab No.: 202109220663
Evaluated By: SKULLAS

Particle Count exceeds guidelines. Refer to compartment history for more details. The following is recommended: Replace filter. The following is recommended: Replace filter. Closely monitor for signs of contamination and/or wear. For a more indepth review, refer to compartment history. Help confirm results. When C or D codes are present, the following is recommended: Replace filter. If applicable, perform off-line filtration if

Sample Condition Particle Count Status C

OTHER SAMPLE INFORMATION

PO No.:
Work Order No.:
Reference No.: 5543015
Filter Age:
Make Up Oil Amount:

FLUID INFORMATION

Fluid Manufacturer: CASTROL
Fluid Brand/Product: DUAL RANGE HV
Fluid Grade: ISO 46

Results History Actions Graphs Attachments

ALL ACTIONS 0

Quick Links

CANCEL SAVE NEW ACTION

CREATE ACTIONS FROM SAMPLE

HOME ACTIONS **SAMPLES** LABELS EQUIPMENT ANALYTICS REPORTS DISTRIBUTION ADMIN PREFERENCES

ACCOUNT INFORMATION

Lab Customer ID#: 319182
Company Name: [ACME Demo](#)
Worksite: Houston, TX
Address: 123,
Edmonton, Alberta, T6B 3M9

SAMPLE INFORMATION

Lab No.: 202109220663
Sample Tracking #: E202109170544
Sampled Date: 09/14/2021
Received Date: 09/22/2021
Completed Date: 09/23/2021

OTHER SAMPLE INFORMATION

PO No.:
Work Order No.:
Reference No.: 5543015
Filter Age:
Make Up Oil Amount:

UNIT INFORMATION

Unit ID: [632407](#)
Unit Manufacturer: Freightliner
Unit Model: M2106
Unit Serial:
Unit Worksite: Houston, TX

COMPONENT INFORMATION

Component Description: [HYDRAULIC](#)
Component Manufacturer: Galbreath
Component Model: CH8000
Component Serial:
Component Type: HYDRAULIC

FLUID INFORMATION

Fluid Manufacturer: CASTROL
Fluid Brand/Product: DUAL RANGE HV
Fluid Grade: ISO 46

RECOMMENDATIONS

Maintenance for Lab No.:
202109220663
Evaluated By: SKULLAS

Particle Count exceeds guidelines. --RECOMMENDATIONS -- Change oil filter. Sample results indicate presence of contamination and/or wear. For a more indepth review, refer to compartment history, trend graph or other Labcheck tools. A resample of the compartment will help confirm results. When C or D codes are present, the following is recommended, if not done at time of sampling. Change oil, and filters (if applicable), to remove contamination. If applicable, perform off-line filtration if available. Closely monitor unit and resample at one-half the normal service interval.

Results History **Actions** Graphs Attachments Comments

ALL ACTIONS 1

All

+ NEW ACTION

Status

Resolution



COMPONENT OVERDUE FOR SAMPLING: HYDRAULIC OF 632407

New

UNRESOLVED



Assigned To

Demo Abc

Created By

Acme Demo

Customer

ACME Demo

Worksite

Houston, TX

Unit ID

632407

Comp. Desc.

HYDRAULIC

[Comment](#)

The newly created action will be displayed at the top of the list on the Actions tab.

CREATE ACTIONS FROM SAMPLE

ACCOUNT INFORMATION

Lab Customer ID#: 319182
Company Name: ACME Demo
Worksite: Houston , TX
Address: 123,
 Edmonton, Alberta, T6B 3M9

SAMPLE INFORMATION

Lab No.: 202109220663
Sample Tracking #: E202109170544
Sampled Date: 09/14/2021
Received Date: 09/22/2021
Completed Date: 09/23/2021

OTHER SAMPLE INFORMATION

PO No.:
Work Order No.:
Reference No.: 5543015
Filter Age:
Make Up Oil Amount:

UNIT INFORMATION

Unit ID: 632407
Unit Manufacturer: Freightliner
Unit Model: M2106
Unit Serial:
Unit Worksite: Houston , TX

COMPONENT INFORMATION

Component Description: HYDRAULIC
Component Manufacturer: Galbreath
Component Model: CH8000
Component Serial:
Component Type: HYDRAULIC

FLUID INFORMATION

Fluid Manufacturer: CASTROL
Fluid Brand/Product: DUAL RANGE HV
Fluid Grade: ISO 46

RECOMMENDATIONS

Maintenance for Lab No.:
202109220663
Evaluated By: SKULLAS



Particle Count exceeds guidelines. --RECOMMENDATIONS -- Change oil filter. Sample results indicate presence of contamination and/or wear. For a more indepth review, refer to compartment history, trend graph or other Labcheck tools. A resample of the compartment will help confirm results. When C or D codes are present, the following is recommended, if not done at time of sampling. Change oil, and filters (if applicable), to remove contamination. If applicable, perform off-line filtration if available. Closely monitor unit and resample at one-half the normal service interval.

Results

History

Actions

Graphs

Attachments

Comments

SPECTROCHEMICAL ANALYSIS IN PARTS PER MILLION

LAB NO.	SAMPLE DRAWN	WEAR METALS								CONTAMINANTS	ADDITIVES
		Iron	Chromium	Nickel	Aluminum	Lead	Copper	Tin	Silver		
0663	09/14/2021	9	1	<1	2	<1	2	<1	<0.1	<	
0705	03/23/2021	9	1	<1	1	<1	2	<1	<0.1	<	
0652	09/25/2020	9	1	<1	1	1	2	<1	<0.1	<	

The icon is a visual notification that there is one or more actions on the equipment associated with this sample.



CASTROL LABCHECK SUPPORT DESK:

Phone: **866-LABCHECK (522-2432)**

Labchecksupport@bureauveritas.com

<https://www.labcheckresources.com/>

