

GETTING STARTED





Castrol Labcheck *On The* **Go Mobile App**

- The Labcheck program uses an integrated sample processing form with QR-codes.
- This form is designed to integrate with the Castrol Labcheck On The Go Mobile App and allow you to quickly and easily register Castrol Labcheck samples in the "field" or "shop."
- To get started, download the "Castrol Labcheck On The Go" mobile app from the iTunes App Store or Google Play Store.







* If you already have the app installed, make sure to check for updates to ensure you are using the most current version.

GETTING STARTED






Castrol Labcheck On The Go Mobile App

- To login to the Labcheck On The Go Mobile App you will use the same login credentials username & password that you utilize for Castrol Labcheck.


 Note: Moving forward, the app will save your login information.
- Once you have entered your credentials, tap the Sign In button.
- If you do not have a Castrol Labcheck account, you can register for one directly in the app or at:



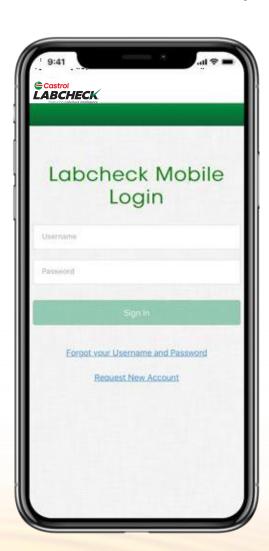

CASTROL LABCHECK PROCESSING FORM



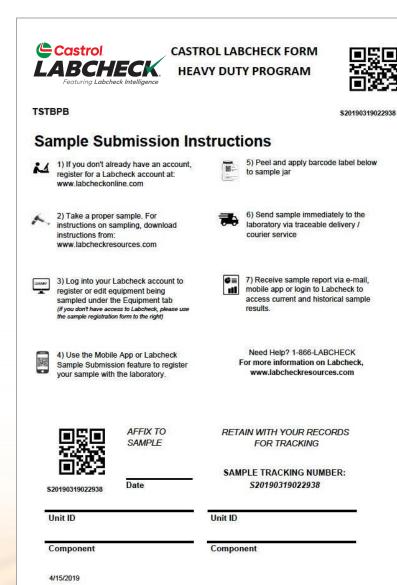



Equipment & Sample Registration



Page 1 of 1

Sampling Customer	502	48549				\$20190319022938
					ORDER	R#: OR00001021
Unit ID:						9
COMPONENT INF	ORMA	TION			1000000000	TO THE PARTY OF TH
Component San	npled:				Positi	on:
Engine (Fuel Type)	100 EM	Transmission			Front	Left
8 HO 10 (10 (10) 1 (1	asoline ropane	☐ Auto ☐ Hydrostatic	Manual		Cente	10 Table 20
	earbox	☐ Speed Reduc	ar.		Rear	☐ Upper ☐ Lower
	ydraulic	Swing Drive	1			Lower
	lanetary	☐ Tandem				ONLY If more than one nt of this type. Select no
		Other:		198		locations (i.e. Front / Lef
775	creen					
Fluid / Product:					Vis	cosity Grade:
☐ ALLISON TRANSYND	□ CB	B MULTI	☐ RADICOOL SF-	0	200	SAE 10W-30
ALPHA HC	(B. E. S. S.	AL RANGE HV	SYNGEAR	788	2532	SAE 15W-40
ALPHA HC EP		RATEC ES	SYNGEAR CD	50	_	SAE 10W
☐ ALPHASYN	10.00	RATEC LFG	☐ TRANS-C		70.76	SAE 30
ANVOL SWX FM	100000	RATEC NG	TRANS-C HT		50.00	SAE 50
AP GEAR LUBE	□ EP	GEAR LUBE	TRANSMAX MA	ANUAL E	ш 🗖	SAE 80W-90
ASSURON	□ мо	ILTI-PURPOSE ATF	UTF			SAE 80W-140
AXLE FD-1	□ PA	RADENE AW	□ VECTON			ISO 32
BLUE HYD PLUS	☐ PA	RADENE R&O	■ VECTON LONG	DRAIN		ISO 46
BP AUTRAN SYN 295	RA	DICOOL HD		ISO 68		ISO 68
						Other
Other Product in	Use:			(No gra	de required	for ATF, UTF or Coolant)
			Fluid Changed:			□ No
Sample Date:			Filter Changed:		Yes	□ No
Unit Age:		☐ HRS ☐	Fluid Ag	je:		□HRS □KM □MI
PO #:			Work Order	#:		(2)
Kabis is the Esst !				Ell in 1		- below
If this is the first tim	e you a	e submitting sa	ampies for this unit	, all in t	ne sectio	in below.
Unit Mfg./Mode	:		Unit S	Serial	#.	6
Unit Worksite:						
Component Mfg	./Mod	el:				
Component Seri	al Nun	nber:				
Sump Capacity:						с∟ 🛮 от 🔲 г

SAMPLE PROCESSING FORM OVERVIEW

4/15/2019



Overview



Test Package Identification



Peel-off QR-Coded Bottle Label to Register Sample on the Labcheck Mobile app or in Labcheck Online




Simplified Machine Registration (now only needed for NEW Machines)



Perforated Sample Form



Peel-off Label for Your Work Order & Sample Tracking

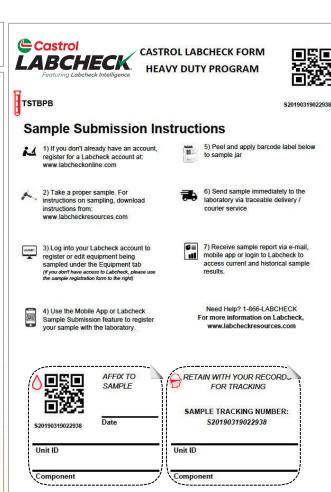



Equipment & Sample Registration

Page 1 of 1

ORDER #: OR00001021 COMPONENT INFORMATION Component Sampled: Position: ☐ Front ☐ Left ☐ Auto ☐ Manua ☐ Center Right ☐ Upper Птоме "Select ONLY If more than one component of this type. Select no more than 2 locations (i.e. Front / Left) Pump Drive | Other ☐ Final Drive ☐ Scree Fluid / Product: Viscosity Grade: RADICOOL SF-O ☐ SAE 10W-30 ALLISON TRANSYND SAE 15W-40 T ALPHA HC SYNGEAR T DUAL RANGE HV T ALPHA HC EP SYNGEAR CD 50 SAE 10W DURATEC ES TRANS-C T ALPHASYN T DURATEC LFG TI SAE 30 ANVOL SWX FM TRANS-C HT T DURATEC NG TI SAE 50 TRANSMAX MANUAL E LL T AP GEAR LUBE ☐ SAE 80W-90 T EP GEAR LUBE ☐ SAE 80W-140 ☐ AXLE FD-1 PARADENE AW BLUE HYD PLUS ☐ PARADENE R&O ☐ VECTON LONG DRAIN ☐ ISO 46 ☐ BP AUTRAN SYN 295 ☐ RADICOOL HD ISO 68 ☐ Other Other Product in Use Fluid Changed: Sample Date: Filter Changed: ☐ Yes ☐ No □ HRS □ KM Fluid Age: HRS KM Unit Age Work Order # If this is the first time you are submitting samples for this unit, fill in the section below. Unit Serial #: Unit Mfg./Model: Unit Worksite. Component Mfg./Model: Component Serial Number: GL QT DL Sump Capacity:



HOW TO USE THE FORM






For machines and components that are already registered, you no longer have to fill out forms. Simply register the sample using the QR-code with the Castrol Labcheck *On The Go* Mobile App or in Castrol Labcheck.

Castro ABC Featuring L			Equipme Sampl Registra	le		
Sampling Custo	mer: 50	248549				2019031902293
				ORI	DER#	: OR00001021
Unit ID:	INICODIA	TION				
				Do	cition	a-
Component S Engine (Fuel Type		. Transmission (1	(vne)		<u>sitior</u>	<u>r.</u> □ Left
	Gasoline		Manual		enter	Right
■ Nat. Gas	Propane	☐ Hydrostatic				Upper
Compressor	Gearbox	Speed Reduce	r			Lower
Cooling System	Hydraulic	Swing Drive				
Crusher	☐ Planetary	■ Tandem				LY if more than one of this type. Select no
Differential	Pump Driv	Other:		more t	han 2 lo	cations (i.e. Front / Le
Final Drive	Screen					
Fluid / Produc	ot:				Visco	osity Grade:
ALLISON TRANS	YND C	RB MULTI	RADICOOL SF-0		□ SA	E 10W-30
ALPHA HC		UAL RANGE HV	SYNGEAR		SA	E 15W-40
ALPHA HC EP		URATEC ES	SYNGEAR CD 50		☐ SA	E 10W
ALPHASYN		URATEC LFG	TRANS-C		☐ SA	E 30
ANVOL SWX FM		URATEC NG	TRANS-C HT		☐ SA	E 50
AP GEAR LUBE	_	P GEAR LUBE	TRANSMAX MANU	JAL E LL	— □ SA	E 80W-90
☐ ASSURON		ULTI-PURPOSE ATF	□ UTF		_	E 80W-140
AXLE FD-1		ARADENE AW	□ VECTON		□ isc	
BLUE HYD PLUS		ARADENE R&O	■ VECTON LONG DE	RAIN	☐ ISC	
BP AUTRAN SY		ADICOOL HD	_ 12010112011001	-	☐ ISC	
					Ott	
Other Produc	t in Hea:					
Outer Froduc	em ose.					ATF. UTF or Coolant
Sample Date			Fluid Changed:	□ Yes	_	No
			ilter Changed:	□ Yes	; –	No
Unit Age:		☐ HRS ☐	Fluid Age:			□HRS □KM
PO #:			Work Order #:			
If this is the first	t time you a	are submitting sa	mples for this unit, fil	II in the se	ection	below.
Unit Mfg./Mo	del:		Unit Se	rial #:		
Unit Worksite						
		dol:				
Component	wig./woo					
Component S	Seriel At.					

If this is the first time sampling a machine or a new component of a machine, you will need to complete the **Equipment & Sample Registration** on the right side of the form and submit this with the sample.

SUBMITTING SAMPLES FOR EXISTING MACHINES LABCE



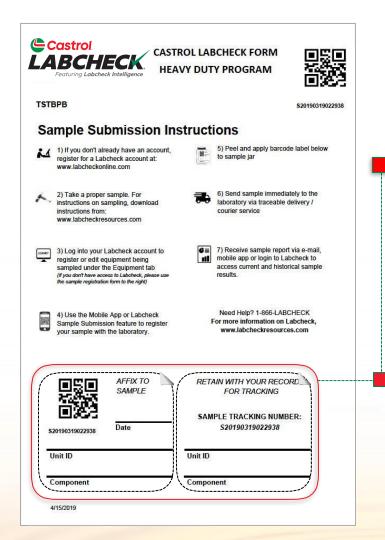



For machines and components that have already been sampled before, simply register a new sample using the QR-code label with the Castrol Labcheck *On The Go* Mobile App or in Castrol Labcheck.

Please be sure to complete the required information on the blank QR label to ensure proper processing.

For more information on how to register samples with Castrol Labcheck *On The Go* Mobile App or in Castrol Labcheck, go to the Labcheck Resource Center: and review the "Mobile App Sample Registration Quick Start Guide."


FIRST TIME SAMPLE SUBMISSION



Sampling a New Machine or Equipment

If you are sampling a new machine or a new component, you will need to complete the Equipment & Samples Registration information.

Note: You can still use this form for any sample submission if you don't wish to register the sample using the Castrol Labcheck On The Go Mobile App or in Castrol Labcheck.

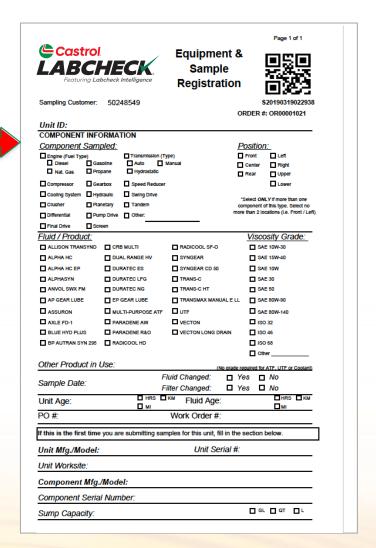

FILLING OUT THE EQUIPMENT & SAMPLE REGISTRATION





CASTROL LABCHECK FORM **HEAVY DUTY PROGRAM**



TSTBPB

S20190319022938

Sample Submission Instructions



1) If you don't already have an account, register for a Labcheck account at: www.labcheckonline.com



5) Peel and apply barcode label below to sample jar



2) Take a proper sample. For instructions on sampling, download instructions from: www.labcheckresources.com



6) Send sample immediately to the laboratory via traceable delivery / courier service




3) Log into your Labcheck account to register or edit equipment being sampled under the Equipment tab (if you don't have access to Labcheck, please use the sample registration form to the right)



7) Receive sample report via e-mail, mobile app or login to Labcheck to access current and historical sample



4) Use the Mobile App or Labcheck Sample Submission feature to register your sample with the laboratory.





AFFIX TO SAMPLE

RETAIN WITH YOUR RECORDS FOR TRACKING



Date

SAMPLE TRACKING NUMBER: S20190319022938

Unit ID

Unit ID

Component

Component

4/15/2019



Instructions

The form header contains instructions for filling out the Equipment & Sample Registration information.

Important Note: The QR-code does not contain any specific sample information until it is registered.



Please be sure to complete the required information on the blank QR-code label to ensure proper processing.

FILLING OUT THE EQUIPMENT & SAMPLE REGISTRATION LABOR



9	\$20190319022938
ORDER #	#: OR00001021
Positio	n:
Front Center	Left Right
	Lower
component	ILY If more than one of this type. Select no ocations (i.e. Front / Lef

Provide the Machine serial number and machine model. Check the component being sampled and provide the information for the oil / fluid in use.

FILLING OUT THE EQUIPMENT & SAMPLE REGISTRATION LABOR



Comple Date:		Fluid (Changed:	Yes		No	
Sample Date:		Filter	Changed:	Yes		No	
Unit Age:	☐ HRS	KM	Fluid Age:			☐HRS	□ KM
PO #:		Wo	ork Order #:				
<u> </u>	submitting	samples			tion b	elow.	
<u> </u>	submitting	samples	for this unit, fil Unit Sei		tion b	elow.	
Unit Mfg./Model:	submitting	samples			tion b	elow.	
Unit Mfg./Model: Unit Worksite:		samples			tion b	elow.	
If this is the first time you are: Unit Mfg./Model: Unit Worksite: Component Mfg./Model. Component Serial Numb	:	samples			tion b	elow.	

- Provide the date the sample was taken, indicate if the oil / fluid and filter were change at the time the sample was taken.
- Provide the total hours on the machine and hours since last oil change. You can also now tie samples to a Work Order or Purchase Order.

Castrol		Equipment &	
ARCH	IECK	Sample	삊줐뱮
	check Intelligence	•	4
		Registration	■38 3
Sampling Customer:	50248549		S20190319022
		0	RDER #: OR00001021
Unit ID:			
COMPONENT INF	ORMATION		
Component San	npled:	<u> </u>	Position:
Engine (Fuel Type)	Transmission (T		Front Left
	asoline Auto I	_	Center Right
	,	_	Rear Upper
	earbox Speed Reducer		Lower
Cooling System H	-		Select ONLY If more than on
	anetary Tandem		omponent of this type. Select than 2 locations (i.e. Front /
	ump Drive Other:		
	creen		Minnesity October
Fluid / Product:	CONT. MILL TI	T projecti es e	Viscosity Grade:
ALLISON TRANSYND	_	RADICOOL SF-O	SAE 10W-30
ALPHA HC	DUAL RANGE HV	SYNGEAR	SAE 15W-40
ALPHA HC EP	DURATEC ES	SYNGEAR CD 50	SAE 10W
ALPHASYN	DURATEC LFG	TRANS-C	☐ SAE 30
ANVOL SWX FM	DURATEC NG	TRANS-C HT	SAE 50
AP GEAR LUBE	EP GEAR LUBE	TRANSMAX MANUAL E LL	SAE 80W-90
ASSURON	MULTI-PURPOSE ATF	UTF	SAE 80W-140
AXLE FD-1	PARADENE AW	VECTON	ISO 32
BLUE HYD PLUS	PARADENE R&O	■ VECTON LONG DRAIN	☐ ISO 46
BP AUTRAN SYN 295	RADICOOL HD		☐ ISO 68
			Other
Other Product in			equired for ATF. UTF or Cook
Sample Date:	F	fluid Changed: 🔲 Y	_
запре рас.		ilter Changed: 🔲 Y	
Unit Age:	☐ HRS ☐	KM Fluid Age:	□HRS □ I
PO #:		Work Order #:	
f this is the first tim	e you are submitting sar	nples for this unit, fill in the	section below.
Unit Mfg./Model	:	Unit Serial #:	
/ In: it 14/ In- it			
Unit worksite			
Unit Worksite:	/Model·		
Onit Worksite: Component Mfg Component Seri			

FILLING OUT THE EQUIPMENT & SAMPLE REGISTRATION LABOR



O	Fluid Changed: Yes	□ No
Sample Date:	Filter Changed:	□ No
Unit Age:	□ HRS □ KM Fluid Age: □ MI	□HRS □KM □MI
PO #:	Work Order #:	

If you want the sample to be registered to a specific customer account and not to your dealer account, complete the customer information section so the lab knows how to log this sample.

Castro ABC Featuring		CK.	Equipr San Regist	nple		
Sampling Custo Unit ID:	mer: 50	248549	Regis		:	\$2019031902293 #: OR00001021
COMPONENT	INFORM	ATION				
Component :	Sampled			F	Positio	n:
Engine (Fuel Type Diesel Nat. Gas	Gasoline Propane	☐ Hydrostatic	Manual		Front Center Rear	Left Right Upper
Compressor Cooling System Crusher Differential	Planetary	Speed Redu Swing Drive Tandem Other:	cer	0	omponent	Lower WLY if more than one of this type. Select no ocations (i.e. Front / Le
Fluid / Produc	Screen				Vice	ositv Grade:
☐ ALLISON TRANS	_	RB MULTI	RADICOOL S	E-0		USILY Grade. NE 10W-30
ALPHA HC	_	UAL RANGE HV	SYNGEAR	1-0	_	LE 15W-40
ALPHA HC EP	_	URATEC ES	SYNGEAR C	n sn	_	NE 10W
☐ ALPHASYN	_	URATEC LFG	☐ TRANS-C	0.00	□ SA	
ANVOL SWX FM	_	URATEC NG	TRANS-C HT		□ SA	
AP GEAR LUBE	_	P GEAR LUBE	TRANSMAX	MANUAL E LL	□ SA	AE 80W-90
ASSURON		IULTI-PURPOSE AT	F UTF		□ s#	AE 80W-140
AXLE FD-1		ARADENE AW	□ VECTON		II IS	0 32
■ BLUE HYD PLUS	S DF	ARADENE R&O	■ VECTON LO	NG DRAIN	IS	D 46
BP AUTRAN SY	N 295 🔲 F	ADICOOL HD			IS	0 68
					☐ Ot	her
Other Produc	et in Use:			(No grade r	equired fo	r ATF. UTF or Coolan
Sample Date	5		Fluid Changed Filter Changed	_	_	No No
Unit Age:		☐ HRS	□ ^{KM} Fluid A	ige:		□HRS □KM
PO #:		LIMI	Work Orde	r#:		<u>∟</u> mı
If this is the firs	t time you	are submitting s	amples for this ur	nit, fill in the	section	below.
Unit Mfg./Mo	del:		Unit	Serial #:		
Unit Worksite	2:					
Component	Mfg./Mo	del:				

SENDING THE SAMPLE TO THE LAB





If you registered the sample via the Castrol Labcheck *On The Go* Mobile App or Castrol Labcheck online, you just need to send the bottle.

If you are not pre-registering the sample, you will need to submit the form with the sample.

Castrol LABCHECK Featuring Labelheck Intelligence	Equipment Sample Registration	果家果		
Sampling Customer: 5024854	9	\$20190319022938 ORDER #: OR00001021	3	
Unit ID:				
COMPONENT INFORMATION		DW		
	ansmission (Type)	Position:		
	tydrostatic	☐ Center ☐ Right		
□ Compressor □ Gearbox □ St	peed Reducer	Lower		
	wing Drive			
Crusher Planetary T		"Select ONLY If more than one component of this type, Select no		
Differential Pump Drive O	ther:	more than 2 locations (i.e. Front / Left	0	
Final Drive Screen				
Fluid / Product;		Viscosity Grade:		
☐ ALLISON TRANSYND ☐ CRB MULT	TI RADICOOL SF-O	☐ SAE 10W-30		
ALPHA HC DUAL RAN	ISE HV SYNGEAR	■ SAE 15W-40		
☐ ALPHA HC EP ☐ DURATED	ES SYNGEAR CD 50	SAE 10W		
☐ ALPHASYN ☐ DURATED		☐ SAE 30		
ANVOL SWX FM DURATED		SAE 50		
☐ AP GEAR LUBE ☐ EP GEAR				
ASSURON MULTI-PU		☐ SAE 80W-140		
☐ AXLE FD-1 ☐ PARADEN		□ 180 32		
BLUE HYD PLUS PARADEN		ISO 46		
☐ BP AUTRAN SYN 295 ☐ RADICOO	LHD	130 68		
		□ Other		
Other Product in Use:	(No gra	de required for ATF, UTF or Coolant		
Sample Date:		Yes □ No		1
•		Yes No		AND DESCRIPTION OF THE PARTY OF
Olit Age.	□ HRS □ KM Fluid Age:	□HRS □KM	William marketill	
PO #:	Work Order #:			
If this is the first time you are sub	mitting samples for this unit, fill in t	the section below.		
Unit Mfg./Model:	Unit Serial	#:		
Unit Worksite:			BUSINE	
Component Mfg./Model:			PERMIT NO. 216	1
Component Serial Number:			Castrol	-
Sump Capacity:		GL QT DL	ABCHE	
			NEXTGENE HAW JACK NORTHROP	1 Det
			HAWTHORNE, CA 90250	The same of



CASTROL LABCHECK SUPPORT DESK:

Phone: 866-LABCHECK (522-2432)

Labchecksupport@bureauveritas.com

https://www.labcheckresources.com/

